



MICROTECH UNIVERSAL 60-2 TRIGGER KIT


MOUNT PICK UP SENSOR SO IT IS
IN LINE WITH THE 11TH TOOTH,
WITH THE ENGINE AT TDC CYL #1

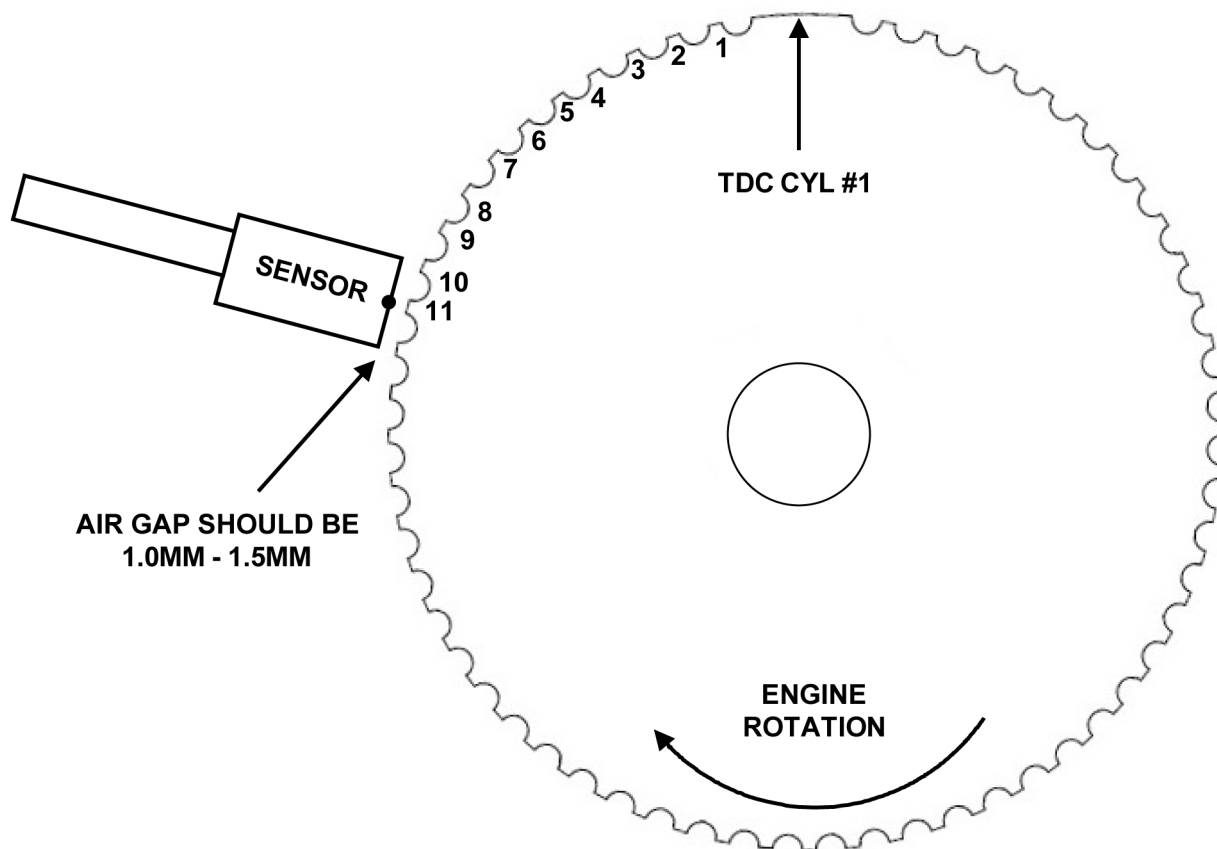

SENSOR MUST BE LINED
UP WITH THE CENTRE OF
TRIGGER WHEEL

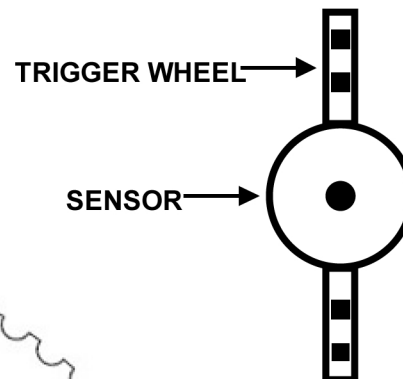

ECU WIRING
LOOKING INTO SENSOR PLUG

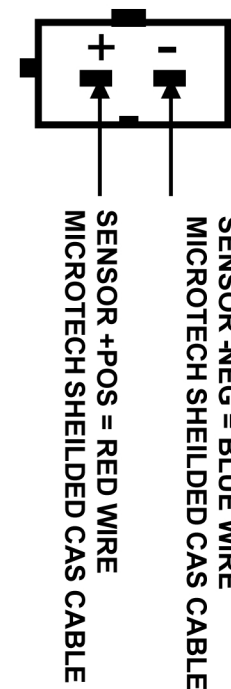

ECU SETTINGS

TEETH CAS = (6CYL=20) OR (4CYL=30)
TDC REF = 11

NOTE: FOR BEST RESULTS MOUNT
SENSOR BRACKET ON A "SLOT" TO
ALLOW FINER TIMING ADJUSTMENT